



**Warning: Choking Hazard**

Assembly hardware contains small parts. **Adult assembly required.**



**Warning: No Climbing** Units are not

intended for children to climb on and it is recommended that units **over 32 inches tall** be **attached to a wall** to prevent tipping.

## Assembly Instructions for: Puppet Theater - R950DE

Instructions: Unbox unit and find hardware bag inside of box.

- 1 - Attach legs to bottom section as shown with the screws provided.
- 2 - Take upper section and bolt it to the lower section with bolts. Tighten with screw driver.
- 3 - Slightly bend curtain rod and place into the holes at top of unit. Unroll the curtains and use tie backs to hold open.
- 4 - Unwrap header board and place into the grooves at top of puppet theater.

header board

upper section

**Required Tools:**

Medium Size  
Phillips Screwdriver

1/4 X 20 bolts

bottom section

1" washer head screws

If you have any difficulties assembling this product, please call Childs Play Customer relations at (800) 447-8375 or email us at [mail@childsplay1.com](mailto:mail@childsplay1.com)  
Childs Play 131 Yorktown, Dallas, Tx. 75208  
[www.childsplay1.com](http://www.childsplay1.com)